

# FLUID CONTAINMENT BENCH INSTALLATION INSTRUCTIONS

## —IMPORTANT—

### PRODUCT LIABILITY INFORMATION

Read all instructions before proceeding with installation or drawer loading. Vital product information pertaining to proper set-up and cautions are included. Failure to follow these instructions may cause failure which may result in personal injury or property damage.

**RETAIN THIS MANUAL FOR FUTURE REFERENCE**

3002 N. Burdick Street

Kalamazoo, MI 49004

t: 800-748-0227 f: 269-342-4161

[www.borroughs.com](http://www.borroughs.com)



## Before You Begin

1. Check your inventory to be sure you received your entire order; refer to the Parts List on the following pages. If there are any missing or damaged parts, contact the **Borroughs Customer Service Manager @ 1-800-748-0227**.
2. Read and understand the entire installation instructions prior to beginning the install.
3. Some applications **DO NOT** utilize all the holes in components, or all the fasteners supplied, refer to illustrations for specifics.
4. The estimated time to complete the assembly is **30 minutes** with (2) people.

## Tools Required



**#3 Point Phillips Head  
Screwdriver**



**9/16" Wrench**

## Hardware Supplied

**A**

**07792-00**

**Screw 5/16-18 X 1/2**



**B**

**17213-00**


**Nut 5/16-18**



**C**


**100530-00**

**Weldnut 5/16-18**




## Fluid Containment Bench

- 1** Locate the front and back beams and the two side channels shown in the picture below. Using the provided 5/16-18 nuts **B** and bolts **A** , fasten all four corners together. Do not tighten hardware until the end of the assembly.
- 2** Locate the two drip pan channels shown below. Fasten at the shown location using 5/16-18 nuts **B** and bolts **A** provided. Make sure channels face inward.

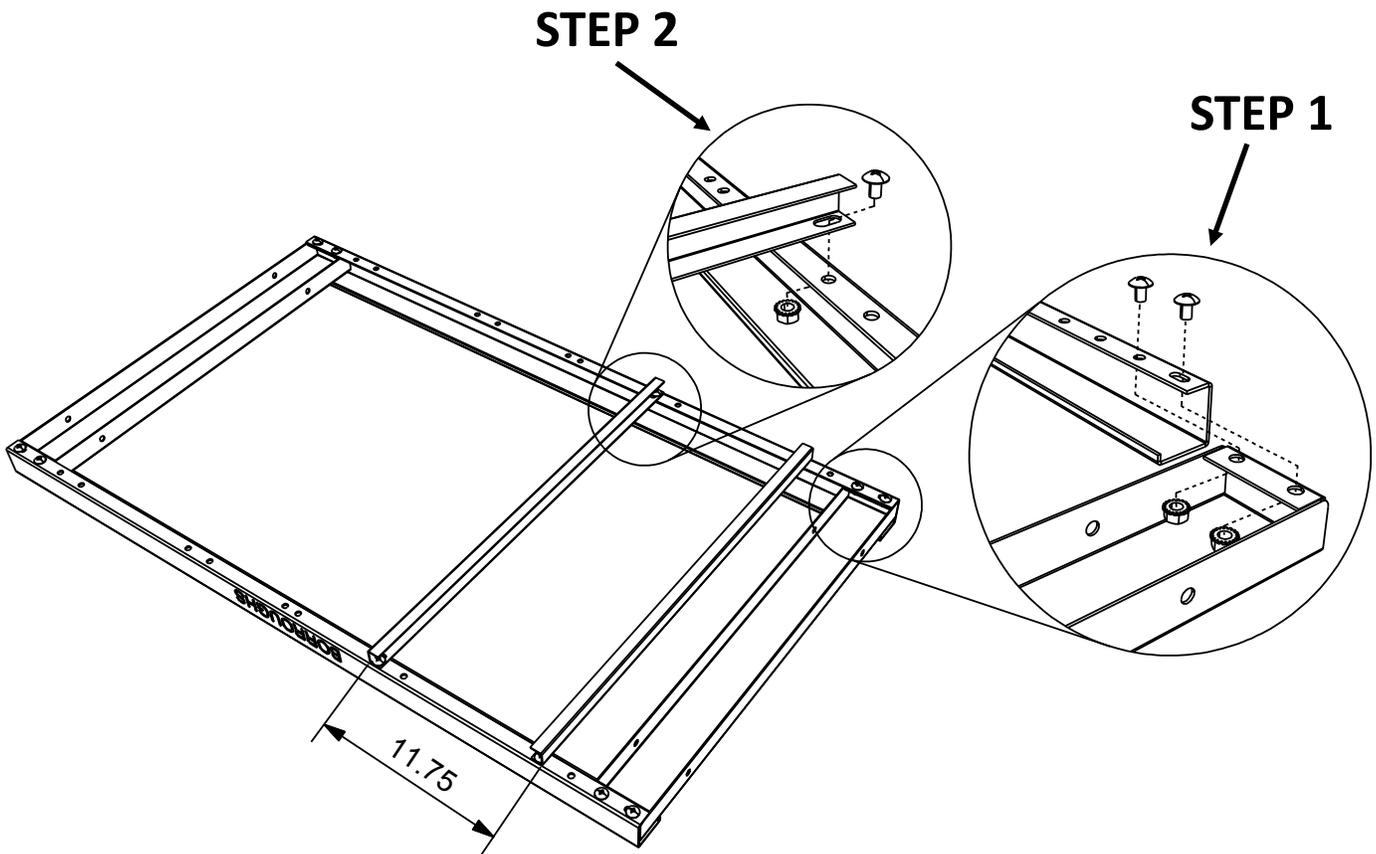


## Fluid Containment Bench

- 3** With top pan facing upside down, place assembly onto top as shown. Drain should be located between drip pan channels.

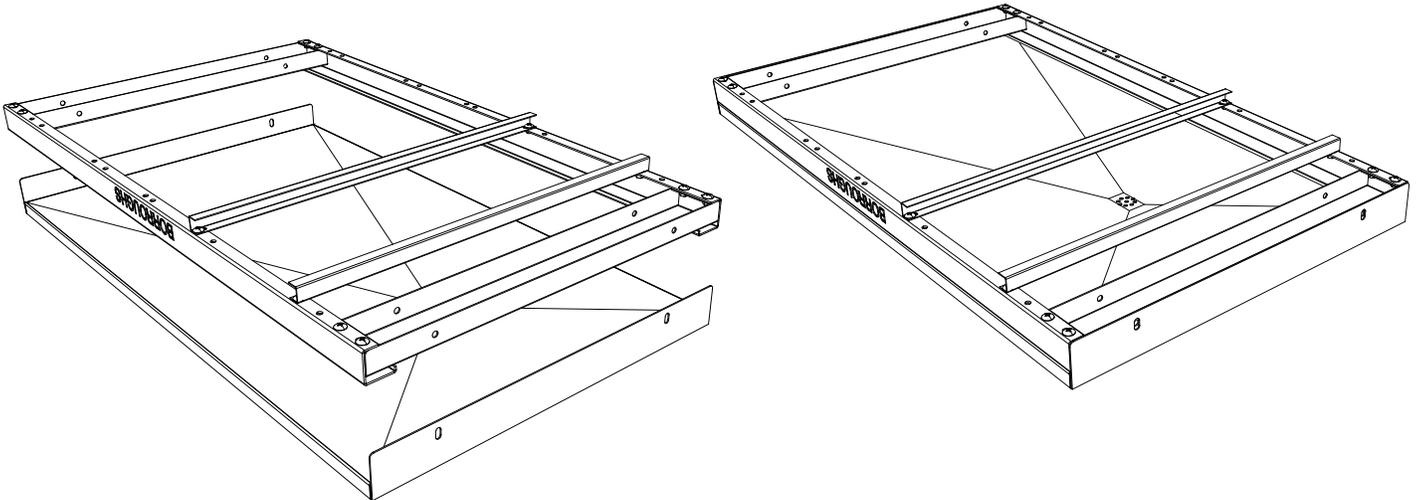


- 4** Locate the 2 welded bench legs. Set the bench leg into the side channel as shown. Using the 5/16-18 nuts **B** and bolts **A** fasten at the four locations. Use a small screw driver to help align all the holes. Repeat for the other bench leg.

**Tighten all hardware.**

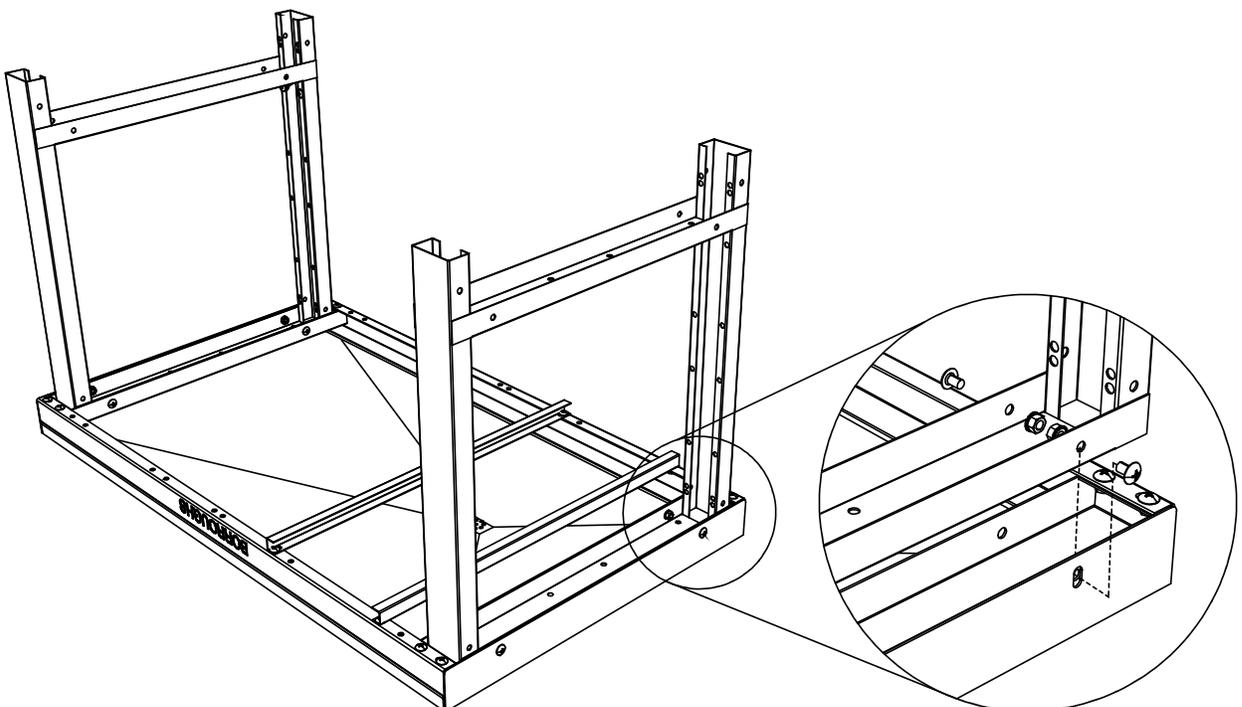


## Fluid Containment Bench

- 5** Locate the two stringers and fasten them to the bench legs.  
Use 5/16-18 weldnuts **C** inside the bench leg channel with **A** bolts.  
Use 5/16-18 nuts **B** on side brace with **A** bolts.  
Repeat on other side  
**Tighten all hardware**

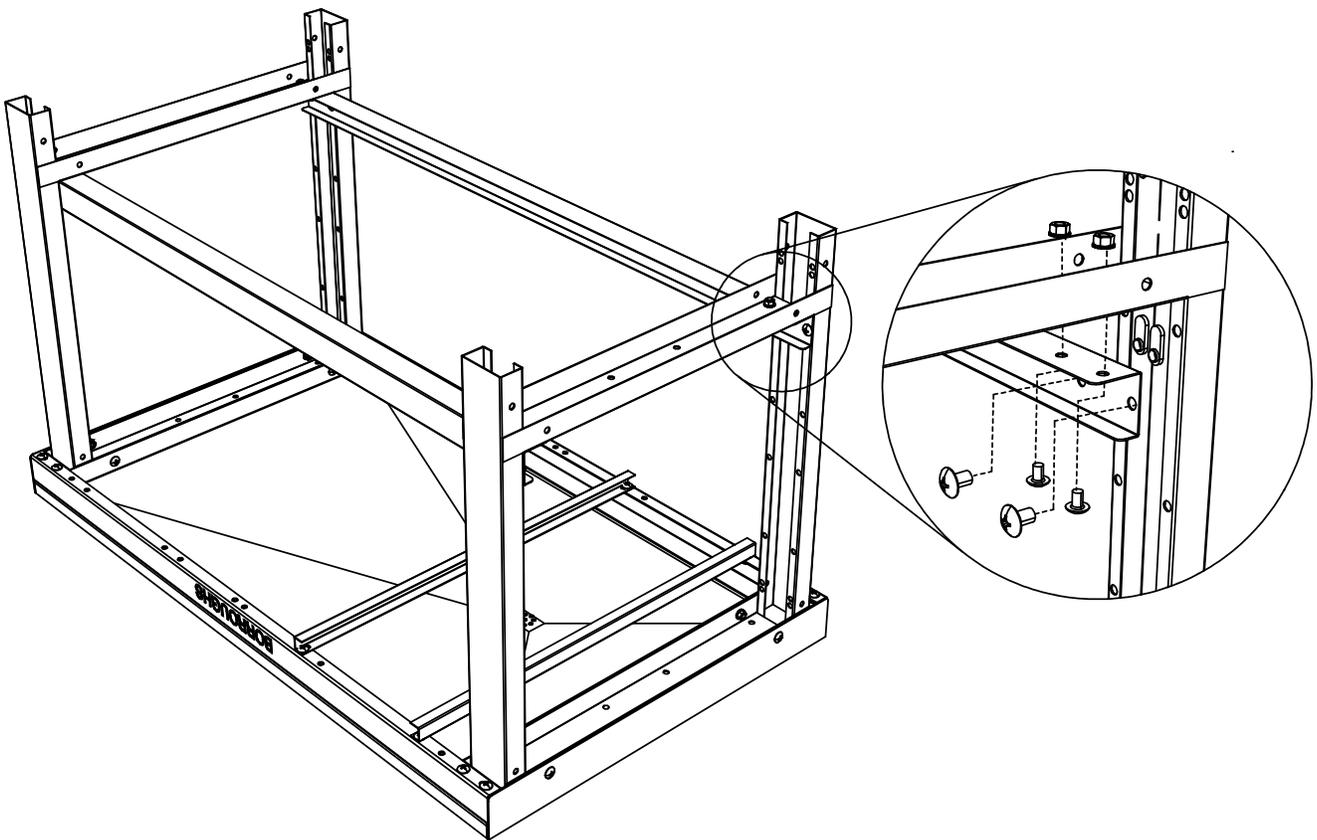

## Fluid Containment Bench

- 6** Insert adjustable legs into welded bench legs. The holes are on 1" increments. Pick your desired height and ensure that all 4 are set to the same location. Fasten together with 5/16-18 nuts **B** and bolts **A**
- 7** Place the galvanized feet onto each adjustable leg and fasten together with 5/16-18 nuts **B** and bolts **A**


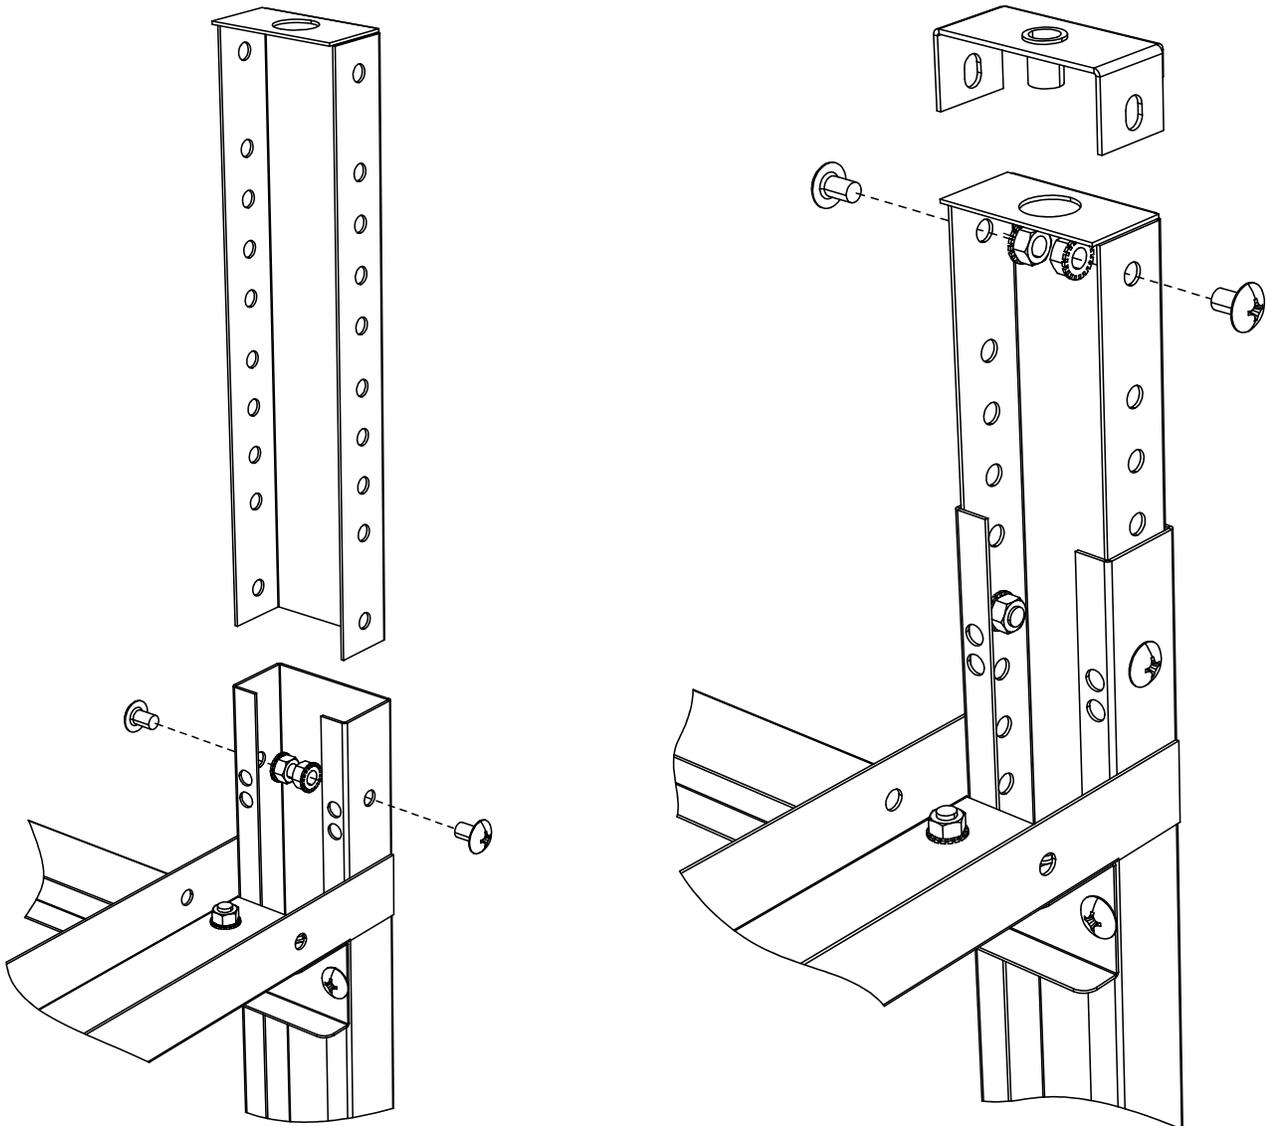


## Fluid Containment Bench

- 8** Thread in stem casters into galvanized feet. Make sure that the two casters with brakes are on the same side.

- 9** With the help of another person. Flip the fluid containment bench upright. Slide in the drip pan. Ensure all fasteners are tight and unit is level.

This completes the assembly on the fluid containment bench.

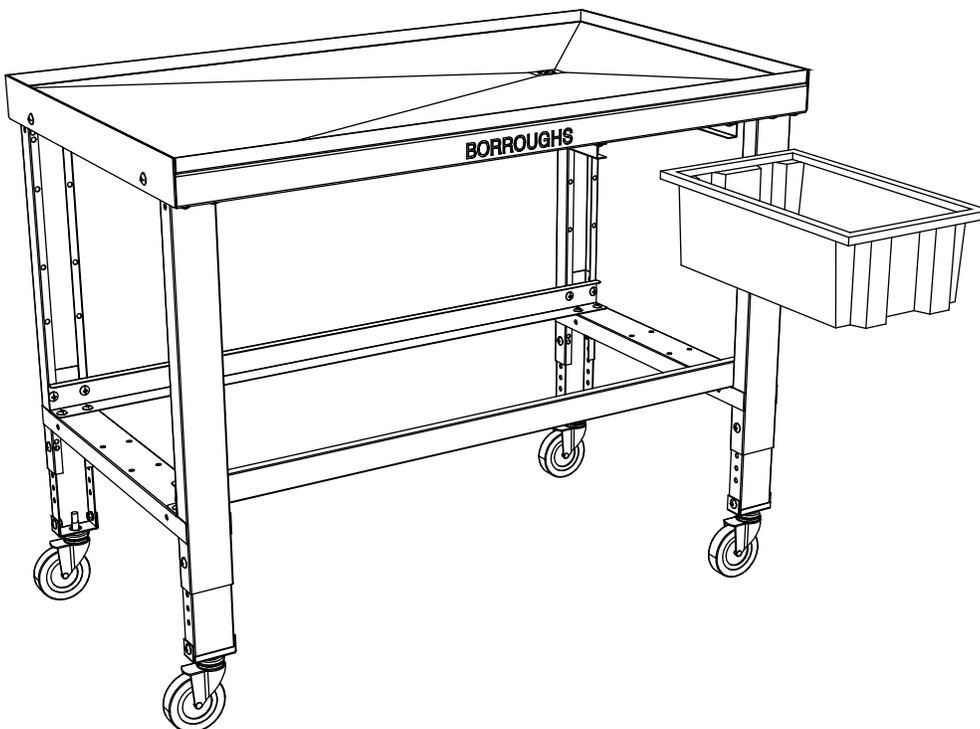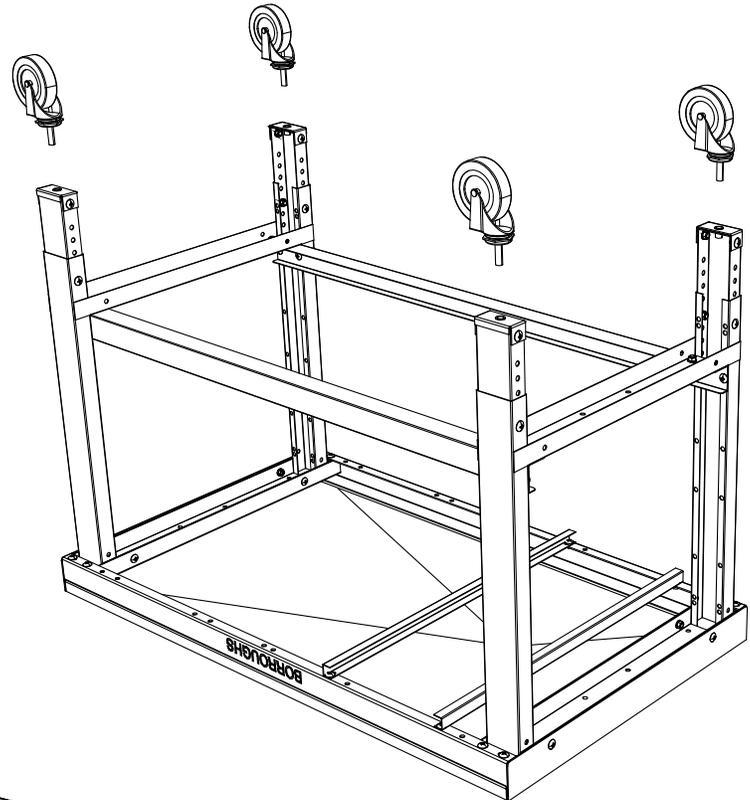



## Warranty Information

### Warranty

Borroughs extends to the original purchaser from the date of purchase, a 5-year limited warranty against manufacturing defects in material and workmanship. If a Borroughs product fails to perform because of a manufacturing defect, Borroughs will examine it. If found defective, it will be repaired or replaced at our option. This warranty applies only to Borroughs products acquired directly from Borroughs or from an authorized Borroughs Distributor.

This warranty does not apply to any product which has been subject to misuse, negligence, or accident; has been damaged in shipment, storage, or installation; has been misapplied or has been modified or repaired by unauthorized persons or been repaired with non-standard Borroughs replacement parts. This warranty specifically excludes claims for indirect, incidental, or consequential damages arising in any way from a product defect. This warranty is exclusive, and exists in lieu of all other warranties, either expressed or implied.

This warranty gives you specific legal rights; you may also have other rights which may vary from state to state. Contact your Borroughs Distributor to obtain warranty service. You must make a written claim. Provide a copy of your purchase record and a written description of the warranty problem with your claim.

If you are unable to contact your Distributor, contact:

**Borroughs, Customer Service Manager,  
3002 N. Burdick St., Kalamazoo, MI 49004-3483.  
Phone: 1-800-748-0227**